INSIGNIA™

42"/46" LED-LCD TV

QUICK SETUP GUIDE

NS-42E570A11/NS-46E570A11

Thank You

for purchasing this fine Insignia television. We hope you enjoy the quality and reliability of this product for years to come.

Audio cable

Component cable

Remote control and 2 AAA batteries

Cleaning cloth



Remote control holder

TV stand and screws

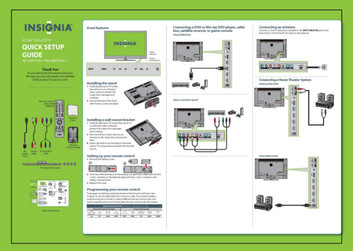

Quick Setup Guide

Front features

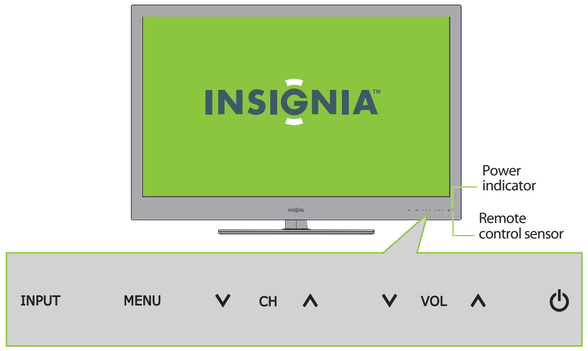

Installing the stand

1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
2 Secure the base to the stand with the four screws provided.

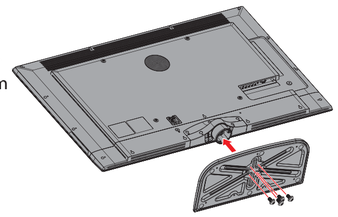

Installing a wall-mount bracket

1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
2 Remove the four screws that secure the base to the stand, then remove the base.
3 Attach the wall-mount brackets to the back of your TV using screws provided with the wall mount.

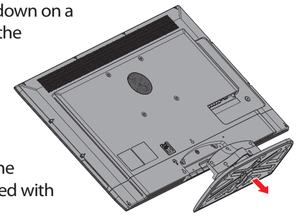

Setting up your remote control

1 Remove the battery cover.

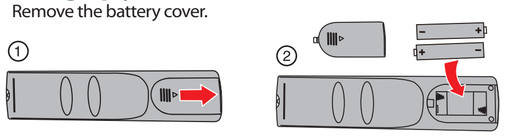

2 Insert two AAA batteries into the battery compartment. Make sure that the + and – symbols on the batteries align with the + and – symbols in the battery compartment.
3 Replace the cover.

Programming your remote control

To program an existing universal remote control to work with your new Insignia TV, see the table below for common codes. If you have problems programming your remote or need a different remote control code, visit www.insigniaproducts.com for the latest remote control code information.

Universal remote control TV codes (for all Insignia TVs manufactured after Jan. 1, 2007)

Universal remote control makers and models				Set-top box makers and models				
Philips PHDVD5, PH5D5S, PMDVR8, PDVR8	RCA RCU807	One for All URC-6690	Sony RM-VL600	TIVO Series 3, HD	Comcast M1057	Dish Network VIP508, VIP622	Motorola DRC800	DirectTV RC23
115	135	0464	8043	0091	0463	720	0463	10463

Connecting a DVD or Blu-ray DVD player, cable box, satellite receiver, or game console

Using HDMI (best)

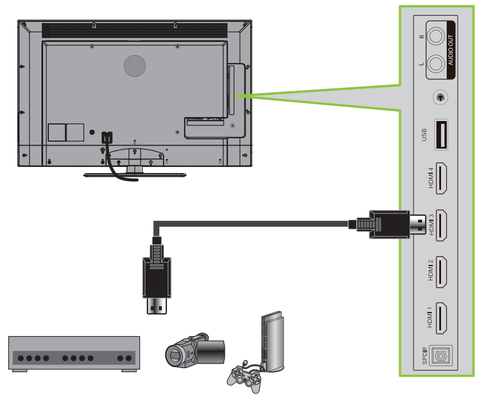

Using component (good)

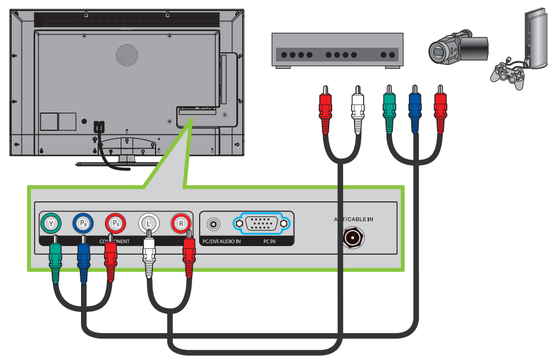

Connecting an antenna

Connect a 75 ohm cable (not included) to the **ANT/CABLE IN** jack on the back of your TV and the RF OUT jack on the antenna.

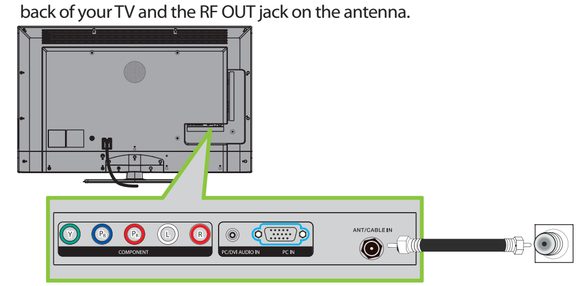

Connecting a Home Theater System

Using analog audio

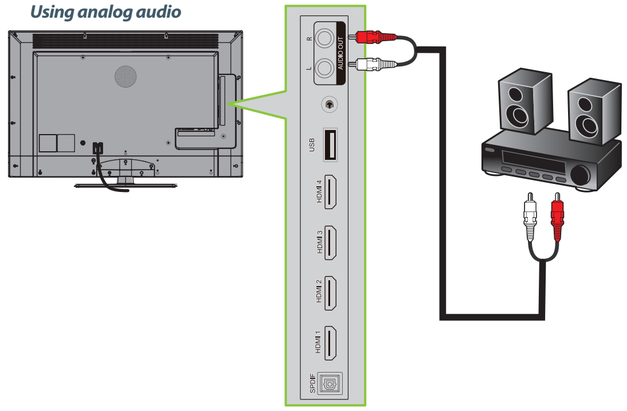

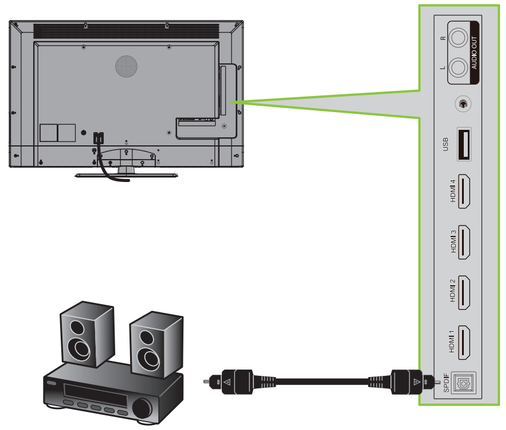

Connecting power

Plug the power cord into a power outlet.

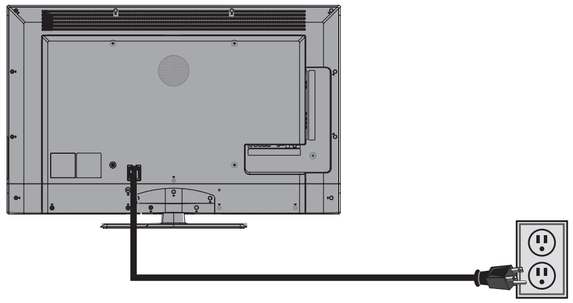

Turning on your TV for the first time

1. Connect the power cord, then press ⏻ (power) to turn on your TV.
2. The *Choose your menu language* screen opens. Press ▲ or ▼ to highlight the language you want, then press **OK/ENTER**.
3. The *Time* screen opens. Press ◄ or ► to select **Auto** or **Manual**, then press **OK/ENTER**.
4. Press ▲ or ▼ to highlight **Time Zone**, then press ◄ or ► to select your time zone.
5. Press ▲ or ▼ to highlight **Daylight Savings**, then press ◄ or ► to select **On** (if your viewing area observes Daylight Savings Time) or **Off** (if your viewing area does not observe Daylight Savings Time).
6. If you selected **Manual** for **Mode**, set the date by pressing ▲ or ▼ to highlight **Year**, **Month**, or **Day**, then press ◄ or ► to adjust the setting.
7. If you selected **Manual** for **Mode**, set the time by pressing ▲ or ▼ to highlight **Time**, then pressing ◄ or ► to select the **hour**, **minute**, or **AM/PM** field. Press ▲ or ▼ to adjust the setting. Press **OK/ENTER**.
8. The *Choose your Picture Mode* screen opens. Press ▲ or ▼ to highlight **Home Mode** (default) or **Retail Mode**, then press **OK/ENTER**. If you selected Retail Mode, a message appears "Are you sure you want **Retail Mode**? Since Energy saving is not realized." Select **Yes** to continue, or select **No** to change your selection.
9. The *Choose your TV source* screen opens. Press ▲ or ▼ to highlight **Antenna**, **Cable**, or **Cable/Satellite Box** (if your cable TV uses a box, select **Cable/Satellite Box**), then press **OK/ENTER**. If you chose **Antenna** or **Cable**, your TV automatically starts scanning for channels available in your viewing area. If you chose **Cable/Satellite box**, your TV does not need to scan for channels.

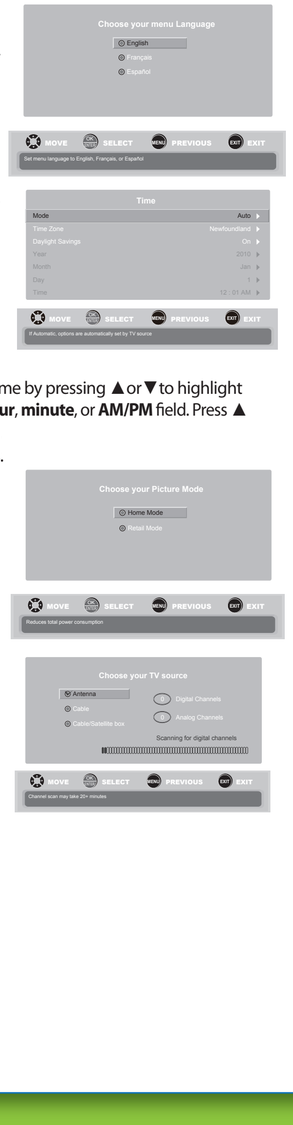

Selecting the video input source

- Press **INPUT**, press ▲ or ▼ to highlight a source, then press **OK/ENTER**. You can also press any of the video source buttons directly.

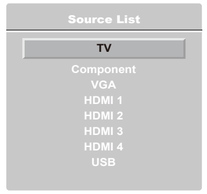

Adjusting the volume

- Press **VOL+** or **VOL-** to change the volume.
- Press **MUTE** to turn off the sound.

Selecting a channel

- To move to a different channel in the channel list, press **CH** ▲ or **CH** ▼.
  OR
- Enter the channel number directly using the number buttons.

Viewing additional information

- Press **INFO** to see status information such as channel number, channel name (if available), signal source, program desription, and DTV signal strength.
  Press **GUIDE** to show the digital program guide, which may show current channel name, program name, time, rating, and summaries, depending on information provided by the broadcaster.

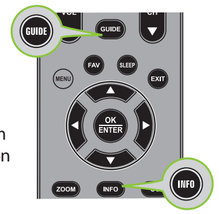

On-screen menu overview

Picture menu

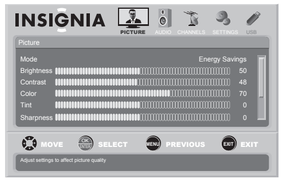

Audio menu

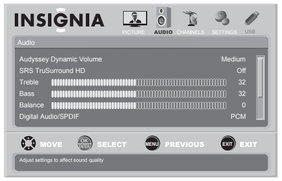

Channels menu

Settings menu

USB menu

Navigating menus with your remote control

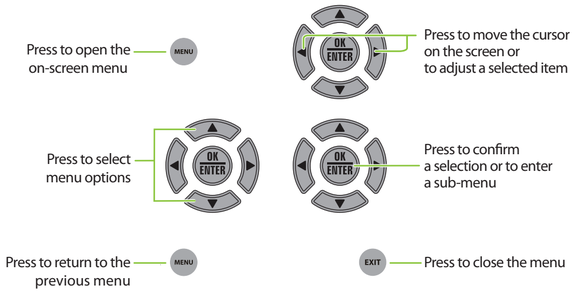
Press to open the on-screen menu
MENU
OK ENTER
Press to move the cursor on the screen or to adjust a selected item
Press to select menu options
OK ENTER
OK ENTER
Press to confirm a selection or to enter a sub-menu
Press to return to the previous menu
MENU
EXIT
Press to close the menu

INSIGNIA™

Two-year limited warranty

See your *User Guide* or visit www.insigniaproducts.com for details.

Need additional help?

See your ***User Guide***! This comprehensive guide includes everything from basic how-to steps to more advanced features.

Check out our **online community forum** at www.insigniaproducts.com for helpful information from other Insignia TV owners.

We're here for you

www.insigniaproducts.com

For customer service, call:

877-467-4289 (U.S./Canada markets)

01 800-926-3000 (Mexico market)

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, MN USA 55423-3645
Best Buy Imports, S. de R.L. de C.V. Av. Santa Fe 485, Segundo Piso, Colonia Cruz Manca, Programa Parcial de Desarrollo Santa Fe, Delegación Cuajimalpa, Distrito Federal, México 05349
RFC#BBI0802114Q2

© 2010 BBY Solutions, Inc.
All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.